


2019 Dodge 1500 Grille Guard (NO SENSORS)


- 200-41-9004
- 200-41-9006

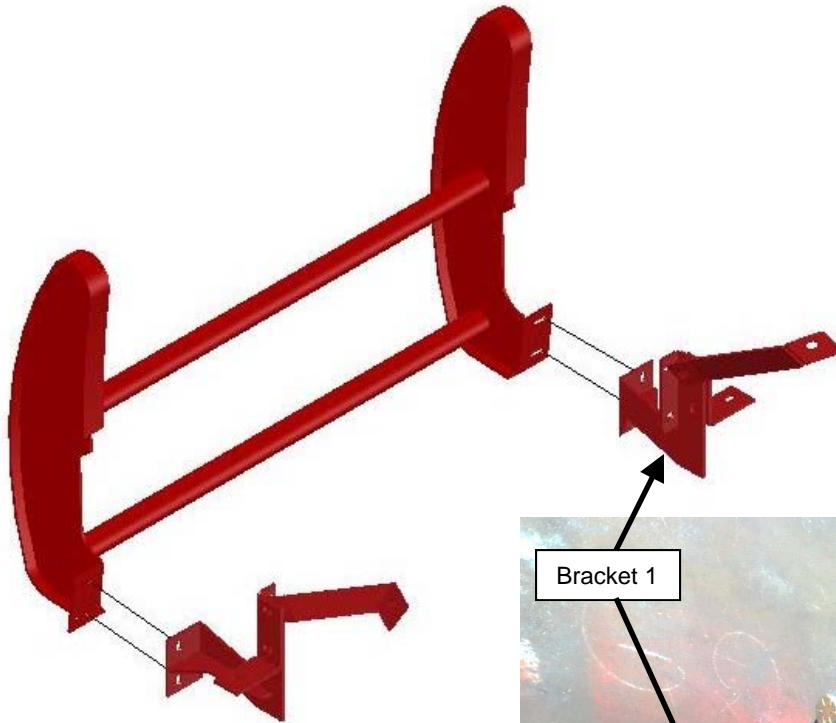

FRONTIER
TRUCK GEAR

Bolt Bag Contents:

Quantity	Description
28	1/2" Flat Washers
14	1/2" Lock Washers
14	1/2" Hex Nuts
14	1/2" X 1-3/4" Bolts
2	14mm X 50mm Bolts
2	14mm Lock Washers
2	14mm Flat Washers
2	1/4" X 1" Bolts
2	1/4" Hex Nuts
2	1/4" Lock Washers
4	1/4" Flat Washers
86	Total Pieces

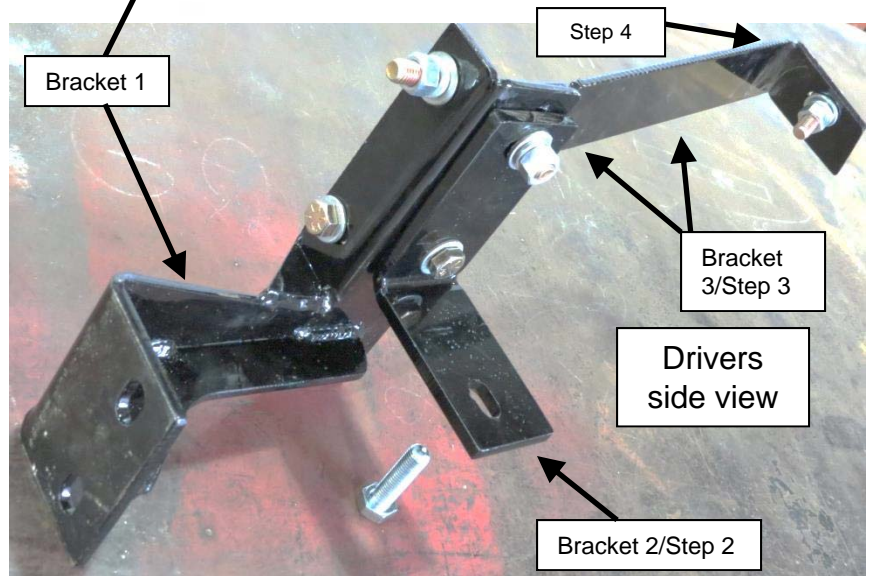

IMPORTANT!! – Keep bolts hand tight until all brackets are fastened together as one unit or you will have a hard time lining up all the holes in the brackets.

Step 1: DO NOT REMOVE FACTORY CHROME BUMPER!! **Tow hook models:** Remove tow hook and any plastic around tow hook. **Non tow hook models:** remove plastic in bumper to expose the truck frame plate. Mount BRACKET 1 to open bolt holes in bumper face plate.

Step 2: Attach BRACKET 2 using 14mm bolt to the threaded nut welded on the inside/bottom of the frame.

Step 3: Attach BRACKET 3 to upper hole of BRACKET 1 and 2 as shown in picture. When this is done it should become obvious where BRACKET 3 attaches on the vertical OEM frame post welded to the bottom of truck frame.

Step 4: Double check spacing of bracket and opening in factory chrome bumper then FINISH TIGHTENING ALL BOLTS!

Step 5: Attach Frontier Grille Guard to BRACKET1, align vertically and horizontally and tighten.

Note: License plate can be re-located by removing plastic license plate backing and reattach ONLY the plate higher up using the 1/4" bolts provided.

PLEASE WATCH ONLINE VIDEO FOR FURTHER DETAILED INSTUCTIONS.