
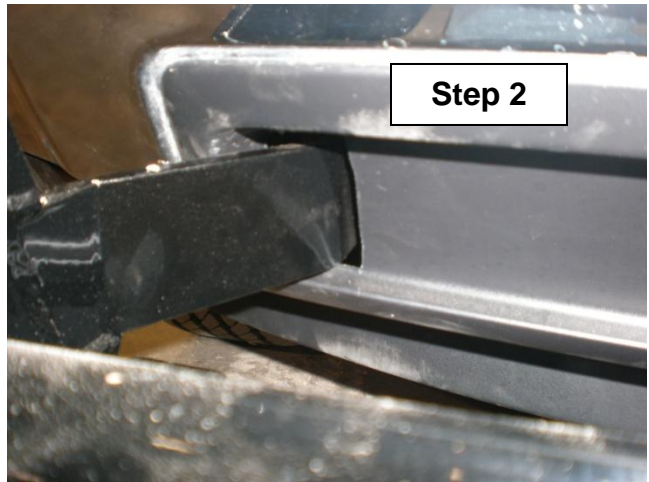
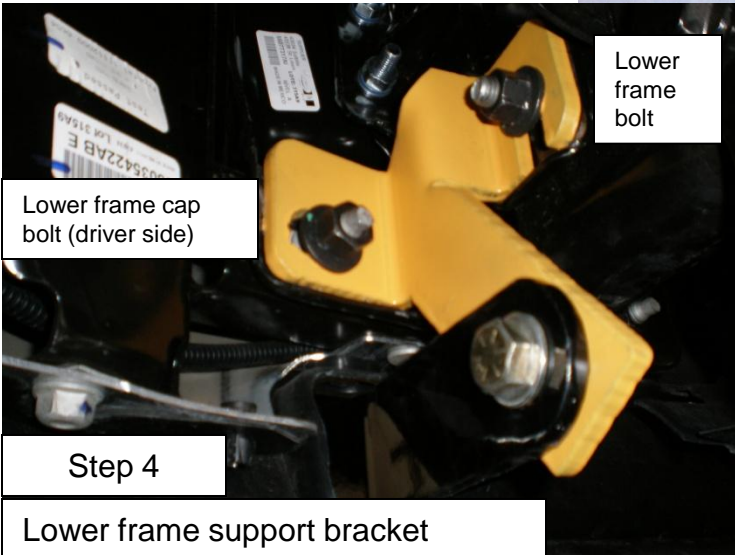


## 10-14 Dodge 2500-3500 Installation Part # 200-41-0004, XGG Part # 700-41-0004

### Bolt Bag Contents:

Quantity	Description
12	1/2" Flat Washers
6	1/2" Lock Washers
6	1/2" Nuts
6	1/2" X 1-3/4" Bolts
8	10mm X 50mm Bolts
8	10 mm Nuts
16	10mm Flat Washers
8	10mm Lock Washers
70	<b>Total Pieces</b>

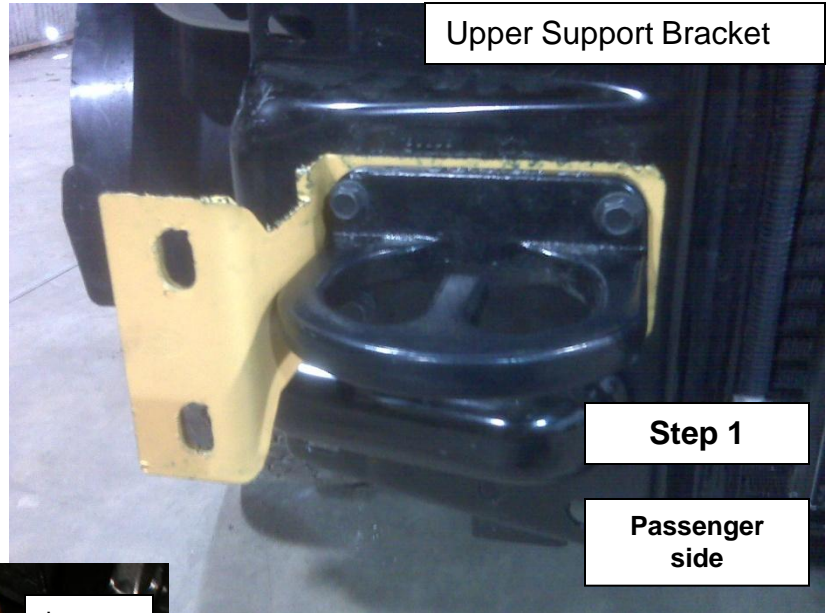

**Step 1:** Do Not Remove Factory Chrome Bumper!! Remove tow hook and mount our Upper frame bracket between tow hook and frame cap. Then re-install factory tow hooks squeezing the upper bracket to frame cap using our replacement bolts (10mm X 50mm). **Non tow hook models:** Install upper frame bracket to existing tow hook holes in frame cap.

**Step 2:** Trim the bottom plastic valence so that the Grille Guard 'foot' can extend through the bottom of the bumper.

**Step 3:** Mount Frontier Grille Guard to upper frame brackets using (1/2" X 1 3/4") bolts provided. Check alignment of grille guard to truck during this step.

**Step 4:** Install lower frame support bracket to outside lower frame cap bolt and lower frame bolt as shown (HINT: Loosen factory nuts and re-tighten). Finally install bottom foot of Frontier Grille Guard to lower frame support bracket (1/2" X 1 3/4" Bolts).

**Step 5:** Make sure all bolts are tight.