


08-10 Ford F250-F450 Grill Guard Installation Instructions. Part # 200-10-8003, XGG Part # 700-10-8003

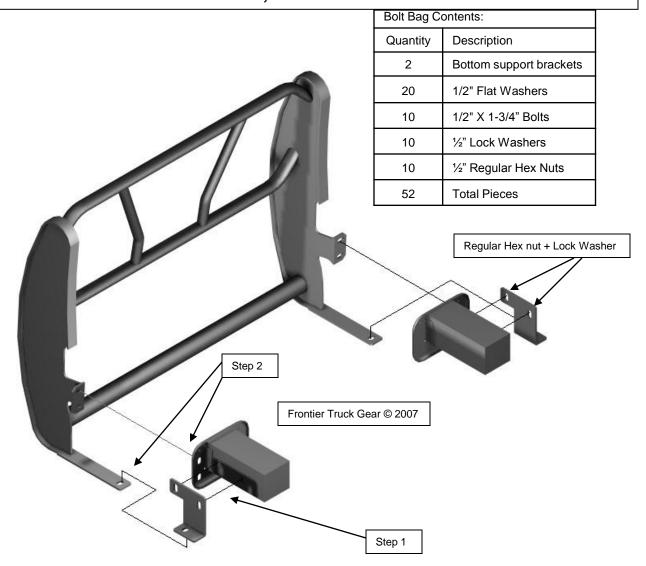

Step 1: Install bottom support bracket behind frame horn. NOTE: You must use regular ½" hex nuts and ½" lock washers on the bolts going through the truck frame!! You will access the bolt head through a small hole located on the inside/bottom of truck frame when you are tightening.

Step 2: Mount grill guard to frame horn and Bottom Support Bracket using ½" lock nuts. Bolts will go through the grill guard bracket and the frame horn on the front. Foot of Grille Guard on the bottom goes UNDER bottom support bracket.

Step 3: Check alignment of grille guard to truck and tighten all bolts.